


ANALOG CHRONOGRAPH WITH 30 MIN. COUNTER AND DATE

PRESENTATION

Display Elements

Second Hand
Minutes Hand
30 Minutes Totalizer
Hour Hand
Chronographic Hand 1/5 Second
Day Indicator
Date Window

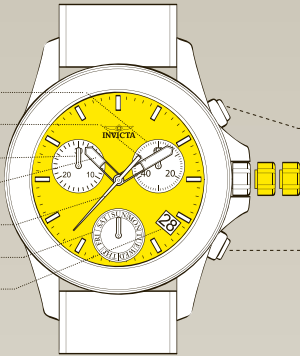

Control Buttons

Push Button A: Start / Stop
Crown
Push Button B: Split / Reset

INSTRUCTIONS MANUAL 8172/220

SETTINGS

Setting the Time Hour and Minute



To Correct the Day




Setting the date

Caution: Never correct date between 9pm and 0:30am




FUNCTION

After 2 Hours of Continuous Running, The Chrono Stops and Resets Automatically to Save the Battery.

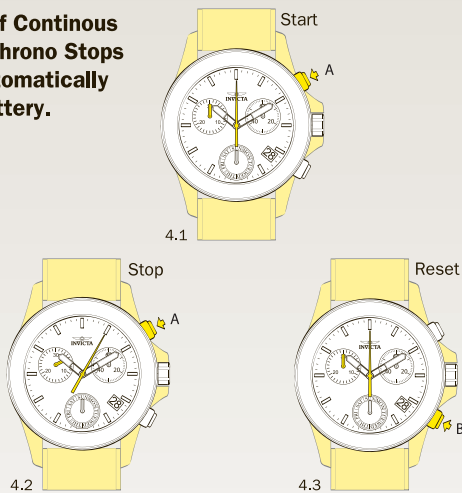


Measuring Split Times

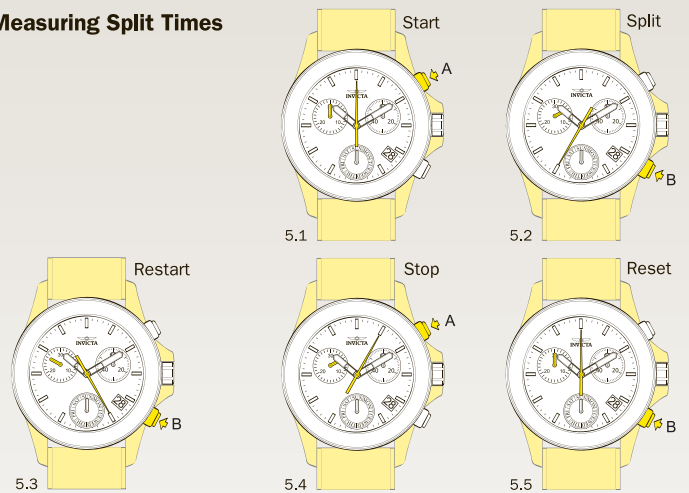

CALIBRATION

After Battery Exchange or Mishandling Only

To reset chronograph, minutes and second chronograph

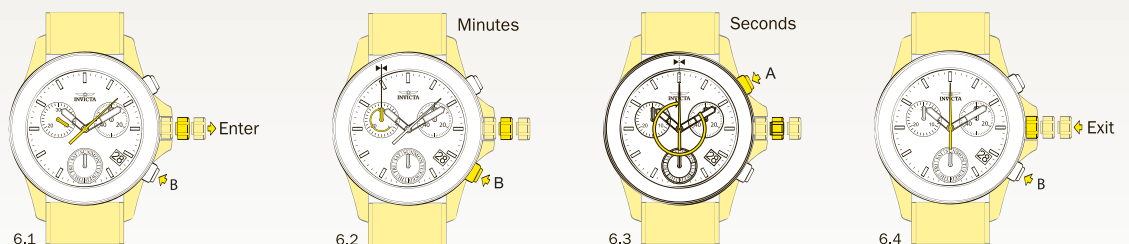

INFO

Battery: 395 – SR57

Service Life Battery: Without chrono = 57 months, with chrono 1H/D = 41 months

0312141 IM - B