


Function : Hour, Minute, Second, Date & Day

PRESENTATION

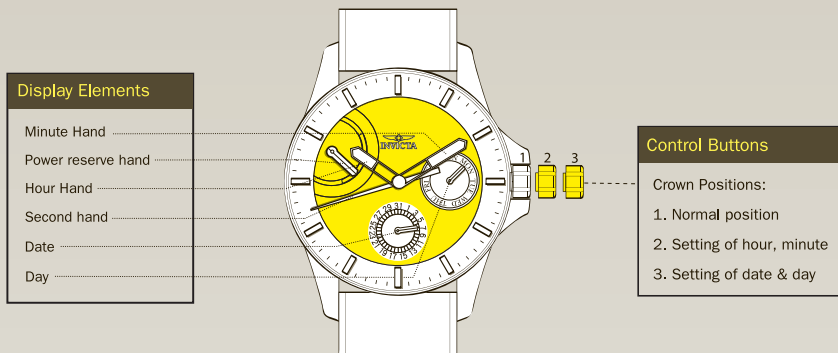

INSTRUCTIONS MANUAL NE20A

SETTINGS

Setting the Time

- 1.1 Pull out the crown to position 3.
- 1.2 Turn the crown to set hour and minute hands.
(Check the AM/PM is set correctly)
- 1.3 Push the crown back to position 1.

Please note:

When time setting is performed in counterclockwise, day and date hands reverse. Please reset by day-date correction.



Setting the Day-Date hands

- 2.1 Pull out the crown to position 2.
- 2.2 Turn the crown clockwise to set date.
- 2.3 Turn the crown counter clockwise to set day.
- 2.4 Push the crown back into position 1.

Please note:

Do not set the calendar between 9:00P.M. and 2:00A.M. If the setting of the calendar is made during this period, the day or date will not change to the next day or date. Please set the calendar after changing the time other than the above period.



To wind up the Mainspring

- Manual winding**
- Rotate the crown clockwise at normal position.
 - Wind turning the ratchet wheel screw 8 times. It will start to move naturally after shaking slightly.
- Machine winding**
- Rotary speed: 30rpm
 - Operation time: 60 minutes