


Function : Hour, Minute, Second & Date

## PRESENTATION

### Display Elements

Minute Hand  
Hour Hand  
Second Hand  
Date

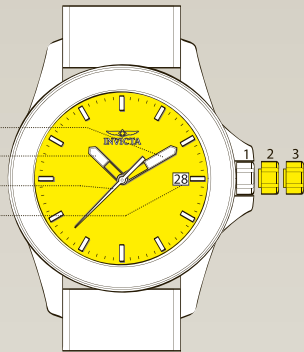

### Control Buttons

Crown Positions:  
1. Normal position  
2. Quick correction of date  
3. Setting of hour, minute, date

## INSTRUCTIONS MANUAL NH37A

## SETTINGS

### Set the Time, Hour, Minute

- 1.1 Pull the crown to position 3.
- 1.2 Turn the crown clockwise to set hour/minute hands to the desired time.
- 1.3 Push the crown back to position 1.



### Set of Date

- 2.1 Set the crown to position 2.
  - 2.2 Turn the crown clockwise step-by-step to the desired date.
  - 2.3 Push the crown back to position 1.
- !! Attention !! Do not set the date between 9:00PM and 4:00A.M. As this will cause a malfunction.



## INFO

### To wind up the Mainspring

- Manual winding – Fully wound up by turning the crown minimum 55 times  
– Fully wound up by turning the ratchet wheel screw 8 times
- Machine winding – Rotary speed: 30rpm  
– Operation time: 60 minutes