

Function : Hour, Minute, Second & 24 Hours

PRESENTATION



INSTRUCTIONS MANUAL NH39A

SETTINGS

Set the Time, Hour, Minute

- 1.1 Pull the crown to position 2.
- 1.2 Turn the crown clockwise to set the hour / minute hands to the desired time.
- 1.3 Push the crown back to position 1.



INFO

To wind up the Mainspring

- Manual winding – Fully wound up by turning the crown minimum 55 times
 – Fully wound up by turning the ratchet wheel screw 8 times
- Machine winding – Rotary speed: 30rpm
 – Operation time: 60 minutes