

Function : Hour, Minute, Second, 24 Hours, Day & Date

## PRESENTATION



## INSTRUCTIONS MANUAL VD74

## SETTINGS

### Setting the Time

- 1.1 Pull out the crown to position 3 when the small second hand is at 12 O'clock position. The second hand will stop on the spot.
- 1.2 Advance the hour and minute hands by turning the crown.
- 1.3 Push the crown back to position 1.



### Setting the Day

- 2.1 Pull out the crown to position 2.
- 2.2 Turn the crown clockwise to set the day.
- 2.3 Push the crown back to position 1.



### Setting the Date

- 3.1 Pull out the crown to position 2.
- 3.2 Turn the crown counter-clockwise to set the date.
- 3.2 Push the crown back to position 1.

**Please note:**

Do not set the date between 10:00PM and 1:00AM. Otherwise, the day may not change properly. If it is necessary to set the date during the time period, first change the time to any time outside it, set the date and then reset the correct time.

